Indicazioni degli alimentatori 5/NT / Notes Power supply units 5/NT

Possibilità di combinazione degli alimentatori 5/NT

Per l'alimentazione dei ventilatori e dei comandi LUNOS è necessario un alimentatore a 12 V. LUNOS offre un alimentatore per scatola da incasso e due varianti per il montaggio su guida DIN. La potenza richiesta dipende dal numero di ventilatori collegati/utilizzati (vedere tabella).

* Per un assorbimento di potenza superiore a 60 watt è necessario prevedere almeno 2 comandi con linee di alimentazione separate dall'alimentatore. Si raccomanda di predisporre un circuito di comando separato per ogni e^{go} o RA 15-60.


Con 5/NT18 L 50 x P 48 x A 24,5 mm
6 (3 Coppie) e^2 + 0 e^{go} + 0 RA
4 (2 Coppie) e^2 + 1 e^{go} + 0 RA
2 (1 Coppia) e^2 + 2 e^{go} + 0 RA
0 e^2 + 3 e^{go} + 0 RA
0 e^2 + 0 e^{go} + 1 RA

Con 5/NT60 L 52,5 x P 90 x A 58,4 mm
10 (5 Coppie) e^2 + 0 e^{go} + 0 RA
8 (4 Coppie) e^2 + 1 e^{go} + 0 RA
6 (3 Coppie) e^2 + 2 e^{go} + 0 RA
4 (2 Coppie) e^2 + 3 e^{go} + 0 RA
2 (1 Coppia) e^2 + 4 e^{go} + 0 RA
0 (0 Coppie) e^2 + 5 e^{go} + 0 RA
6 (3 Coppie) e^2 + 0 e^{go} + 1 RA
4 (2 Coppie) e^2 + 1 e^{go} + 1 RA
2 (1 Coppia) e^2 + 2 e^{go} + 1 RA
0 (0 Coppie) e^2 + 3 e^{go} + 1 RA
0 (0 Coppie) e^2 + 0 e^{go} + 2 RA


Con 5/NT100* L 70 x P 90 x A 58,4 mm
20 (10 Coppie) e^2 + 0 e^{go} + 0 RA
18 (9 Coppie) e^2 + 1 e^{go} + 0 RA
16 (8 Coppie) e^2 + 2 e^{go} + 0 RA
14 (7 Coppie) e^2 + 3 e^{go} + 0 RA
12 (6 Coppie) e^2 + 4 e^{go} + 0 RA
10 (5 Coppie) e^2 + 5 e^{go} + 0 RA
8 (4 Coppie) e^2 + 6 e^{go} + 0 RA
6 (3 Coppie) e^2 + 7 e^{go} + 0 RA
4 (2 Coppie) e^2 + 8 e^{go} + 0 RA
2 (1 Coppia) e^2 + 9 e^{go} + 0 RA
0 (0 Coppie) e^2 + 10 e^{go} + 0 RA
14 (7 Coppie) e^2 + 0 e^{go} + 1 RA
12 (6 Coppie) e^2 + 1 e^{go} + 1 RA
10 (5 Coppie) e^2 + 2 e^{go} + 1 RA
8 (4 Coppie) e^2 + 3 e^{go} + 1 RA
6 (3 Coppie) e^2 + 4 e^{go} + 1 RA
4 (2 Coppie) e^2 + 5 e^{go} + 1 RA
2 (1 Coppia) e^2 + 6 e^{go} + 1 RA
0 (0 Coppie) e^2 + 7 e^{go} + 1 RA
8 (4 Coppie) e^2 + 0 e^{go} + 2 RA
6 (3 Coppie) e^2 + 1 e^{go} + 2 RA
4 (2 Coppie) e^2 + 2 e^{go} + 2 RA
2 (1 Coppia) e^2 + 3 e^{go} + 2 RA
0 (0 Coppie) e^2 + 4 e^{go} + 2 RA
0 (0 Coppie) e^2 + 0 e^{go} + 3 RA



Centralina universale

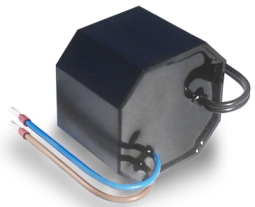

5/NT18

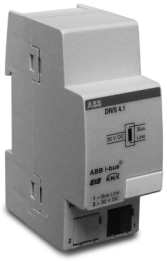

5/NT60



5/NT100

E391 05.24

info@lunos.it

info@lunos.it

Indicazioni degli alimentatori 5/NT / Notes Power supply units 5/NT

Possible combinations of the power supply units 5/NT

A 12 V power supply unit is required to supply the LUNOS fans and LUNOS controllers. LUNOS offers a power supply unit for the flush-mounted box and two variants for top-hat rail mounting. The required power results from the number of fans connected / used (see chart).

* If the power consumption is higher than 60 watts, at least 2 control units must be separate supply lines from the power supply unit. We recommend a separate control circuit for each ego or RA 15-60.


with 5/NT18 B 50 x L 48 x H 24,5 mm
6 (3 Paar) e^2 + 0 e^{go} + 0 RA
4 (2 Paar) e^2 + 1 e^{go} + 0 RA
2 (1 Paar) e^2 + 2 e^{go} + 0 RA
0 e^2 + 3 e^{go} + 0 RA
0 e^2 + 0 e^{go} + 1 RA

with 5/NT60
10 (5 Paar) e^2 + 0 e^{go} + 0 RA
8 (4 Paar) e^2 + 1 e^{go} + 0 RA
6 (3 Paar) e^2 + 2 e^{go} + 0 RA
4 (2 Paar) e^2 + 3 e^{go} + 0 RA
2 (1 Paar) e^2 + 4 e^{go} + 0 RA
0 (0 Paar) e^2 + 5 e^{go} + 0 RA
6 (3 Paar) e^2 + 0 e^{go} + 1 RA
4 (2 Paar) e^2 + 1 e^{go} + 1 RA
2 (1 Paar) e^2 + 2 e^{go} + 1 RA
0 (0 Paar) e^2 + 3 e^{go} + 1 RA
0 (0 Paar) e^2 + 0 e^{go} + 2 RA


with 5/NT100* B 70 x L 90 x H 58,4 mm
20 (10 Paar) e^2 + 0 e^{go} + 0 RA
18 (9 Paar) e^2 + 1 e^{go} + 0 RA
16 (8 Paar) e^2 + 2 e^{go} + 0 RA
14 (7 Paar) e^2 + 3 e^{go} + 0 RA
12 (6 Paar) e^2 + 4 e^{go} + 0 RA
10 (5 Paar) e^2 + 5 e^{go} + 0 RA
8 (4 Paar) e^2 + 6 e^{go} + 0 RA
6 (3 Paar) e^2 + 7 e^{go} + 0 RA
4 (2 Paar) e^2 + 8 e^{go} + 0 RA
2 (1 Paar) e^2 + 9 e^{go} + 0 RA
0 (0 Paar) e^2 + 10 e^{go} + 0 RA
14 (7 Paar) e^2 + 0 e^{go} + 1 RA
12 (6 Paar) e^2 + 1 e^{go} + 1 RA
10 (5 Paar) e^2 + 2 e^{go} + 1 RA
8 (4 Paar) e^2 + 3 e^{go} + 1 RA
6 (3 Paar) e^2 + 4 e^{go} + 1 RA
4 (2 Paar) e^2 + 5 e^{go} + 1 RA
2 (1 Paar) e^2 + 6 e^{go} + 1 RA
0 (0 Paar) e^2 + 7 e^{go} + 1 RA
8 (4 Paar) e^2 + 0 e^{go} + 2 RA
6 (3 Paar) e^2 + 1 e^{go} + 2 RA
4 (2 Paar) e^2 + 2 e^{go} + 2 RA
2 (1 Paar) e^2 + 3 e^{go} + 2 RA
0 (0 Paar) e^2 + 4 e^{go} + 2 RA
0 (0 Paar) e^2 + 0 e^{go} + 3 RA



Universal control

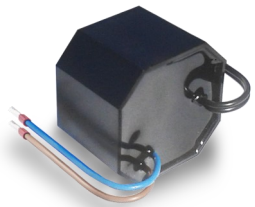

5/NT18

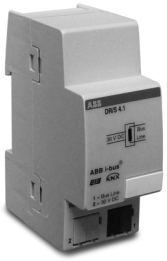

5/NT60



5/NT100