
Impostazioni degli interruttori DIP del Silvento ec in combinazione con le schede di comando 5/EC-ZI 90 e 5/EC-FK 90

Tramite gli interruttori DIP presenti sulla scheda di comando è possibile configurare numerose funzioni del ventilatore. Ogni interruttore bianco dispone di tre posizioni di regolazione.

Attenzione! Modificare la posizione degli interruttori solo quando il ventilatore è completamente fuori tensione.

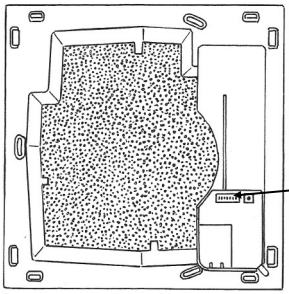

Impostazione di fabbrica:

Ventilazione di base:	OFF
Potenza nominale:	90 m³/h
Funzionamento a intervalli:	OFF
Ritardo allo spegnimento:	OFF
Ritardo all'accensione:	OFF



Interruttori bianchi

Modifica delle impostazioni:

1. Rimuovere il pannello di design
2. Effettuare le impostazione desiderate
3. Rimontare i componenti in ordine inverso

Ventilazione di base

0 m³/h	
15 m³/h	
20 m³/h	
30 m³/h	
40 m³/h	
45 m³/h	
50 m³/h	
60 m³/h	

Funzioni temporizzate

Intervallo OFF	
Intervallo ON* Il ventilaore funziona ogni 4 ore per 15min	
Intervallo ON* Il ventilaore funziona ogni due ore per 15min	
Ritardo allo spegnimento OFF	
Ritardo allo spegnimento ON* Il ventilatore continua a funzionare per 15 min	
Ritardo allo spegnimento ON* Il ventilatore continua a funzionare per 30 min	
Ritardo all'accensione OFF	
Ritardo all'accensione 120 s	
Ritardo all'accensione 45 s	

Ventilazione di richiesta

0 m³/h	
15 m³/h	
20 m³/h	
30 m³/h	
40 m³/h	
45 m³/h	
50 m³/h	
60 m³/h	
90 m³/h	

* Le funzioni temporizzate intervallo e ritardo allo spegnimento vengono sempre eseguite al livello di ventilazione di richiesta impostato (interruttori DIP 6 e 7).

La curva caratteristica del livello 60 m³/h fa parte dell'omologazione DIBt Z-51.1-215 e può essere consultata in tale documento. La curva è inoltre raccolta, insieme a tutte le altre curve, in un file separato scaricabile da www.lunos.it.

I ventilatori della serie Silvento ec possono essere configurati e calibrati nella portata d'aria in combinazione con le schede di comando sopra elencate. Una guida dettagliata è disponibile anch'essa su www.lunos.it.

I valori di portata d'aria indicati nei documenti di accompagnamento si riferiscono allo stato installato, tenendo conto di una corretta progettazione/dimensionamento e del relativo montaggio.


LUNOS Italia
Recuterm
Via Peter-Mitterhofer 23
39025 Naturno · Italia

Tel. +39 0473 667128
info@lunos.it
www.lunos.it

DIP Switch Settings of the Silvento ec in Connection with the Boards of Type 5/EC-ZI 90 and 5/EC-FK 90

You have the option of setting a variety of fan functions via the DIP switches on the control board! Each of the white switches has three setting options!

Attention! Adjust the switch only when the ventilation unit is voltage-free!

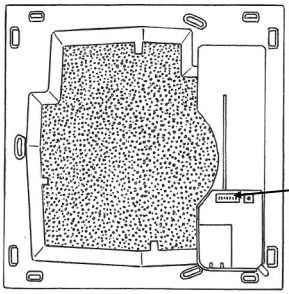

Factory setting:

Basic ventilation:	OFF
Nominal load stage:	90 m³/h
Interval:	OFF
Run-on time:	OFF
Switch-on delay:	OFF



White Switch

Changing the settings:

1. Remove the design screen
2. Make the desired settings
3. Remount in reverse order

Basic Ventilation

	1	2
0 m³/h	-	-
15 m³/h	0	-
20 m³/h	+	-
30 m³/h	0	0
40 m³/h	+	0
45 m³/h	0	+
50 m³/h	+	+
60 m³/h	0	+

Time Functions

	3	4	5
Interval OFF	-	-	-
Interval ON* Fan runs every 4 hrs. for 30 min	0	-	-
Interval ON* Fan runs every 2 hrs. for 15 min	+	-	-
Run-on time OFF	-	0	-
Run-on time ON* Fan runs on for 15 min	0	0	-
Run-on time ON* Fan runs on for 30 min	+	0	-
Switch-on delay OFF	-	+	-
Switch-on delay 120 s	0	+	-
Switch-on delay 45 s	+	+	-

Regulated Ventilation

	6	7
0 m³/h	-	-
15 m³/h	0	-
20 m³/h	+	-
30 m³/h	-	0
40 m³/h	0	0
45 m³/h	+	0
50 m³/h	-	+
60 m³/h	0	+
90 m³/h	+	+

* The time functions Interval operation and Run-on time are always carried out at the set regulated ventilation level (DIP switches 6 and 7).

The characteristic curve of the level 60 m³/h is part of the DIBt approval Z-51.1-215 and can be taken from it. The characteristic curve is also summarized with all other characteristic curves in a separate document that can be downloaded from www.lunos.de.

The fans of the Silvento ec series can be configured in combination with the circuit boards listed above and the volume flowcan be calibrated. Instructions can also be found at www.lunos.de.

The volume flows specified in the accompanying documents refer to the installed condition, taking into account correct design/ planning and corresponding installation.

LUNOS Italia
Recuterm
Via Peter-Mitterhofer 23
39025 Naturno · Italia

Tel. +39 0473 667128
info@lunos.it
www.lunos.it

E332 08.22