
Istruzioni di montaggio per coperchi esterni tipo 1/KWE, 1/KAZ


Informazione generale IT

Verificare che la fornitura sia completa e in perfette condizioni.
I coperchi possono essere utilizzate sia per dispositivi e componenti a 1 canale che a 2 canali, come ad esempio la serie e², la serie ALD, AB 30/60, RA 15-60, e^{go} e $Ne^{xx}t$.

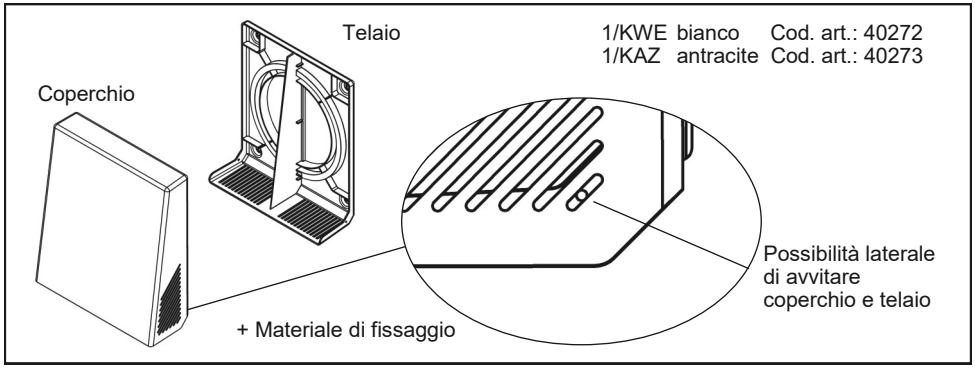

Montaggio IT

Fissare il telaio alla parete utilizzando il materiale di fissaggio in dotazione.
In caso di montaggio su un sistema di isolamento termico a cappotto (WDVS), utilizzare tasselli idonei.
Far scorrere la copertura dall'alto sul telaio e fissarla con le viti di collegamento.

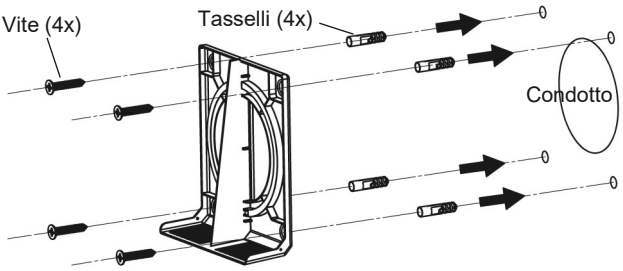

Avvertenza importante per l'installazione di dispositivi a 2 canali come e^{go} e $Ne^{xx}t$
I due flussi d'aria che attraversano il coperchio di protezione dalle intemperie non devono mescolarsi; pertanto è indispensabile un montaggio accurato e corretto.
Montare la guarnizione del traversino centrale della cappetta esattamente in corrispondenza del traversino centrale dell'adattatore EPP presente nel condotto.

Condensa / Pulizia IT

Durante il periodo di riscaldamento può formarsi condensa sul coperchio di protezione dalle intemperie, che può defluire verso l'esterno. In inverno prestare attenzione affinché non si formino ghiaccio sul marciapiede o stalattiti di ghiaccio che possano rappresentare un pericolo per i passanti.
Se necessario, pulire il coperchio con un panno morbido asciutto o leggermente umido.


LUNOS Italia
Recuterm
Via Peter-Mitterhofer 23
39025 Naturno · Italia

Tel. +39 0473 667128
info@lunos.it
www.lunos.it

Installation Manual for the Weather Protection Hoods Types 1/KWE, 1/KAZ


Shipping unit EN

Check the delivery for completeness and perfect condition! The hoods can be used for both 1-channel and 2-channel devices and components, such as the e² series, ALD series, AB 30/60, RA 15-60, ego and Nexxt devices.

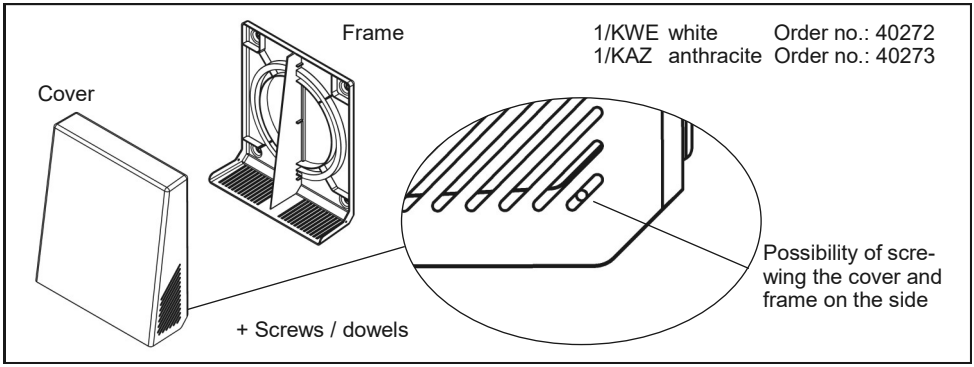

Assembly EN

Mount the frame on the wall using the screw accessories supplied.
When fastening in the thermal insulation composite system, please use suitable dowels.
Slide the cover from the top onto the frame and secure it with the connecting screws.

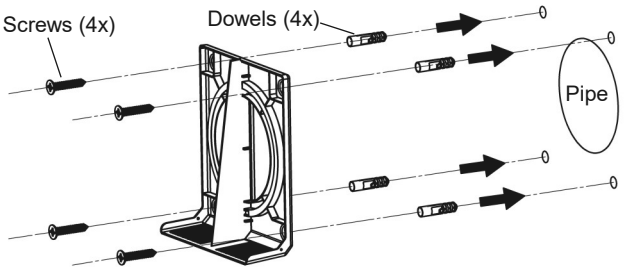

Important information about the installation of 2-channel devices like e^{go} and $Ne^{xx}t$
The two air currents flowing through the weather protection hood must not mix, therefore clean and correct assembly is absolutely essential! Therefore, install the gasket of the middle bar of the weather protection hood exactly above the middle bar of the EPP adapter in the pipe. Only a vertical position of the middle bars is permitted!

Condensate / Cleaning EN

In the weather protection, condensate can occur during the heating period and flow out of the opening. In winter, please make sure that there is no ice formation on the sidewalk or that no icicles form which can become a hazard for passers-by!
If necessary, wipe the weather protection hood with a dry or damp soft cloth.

LUNOS Italia
Recuterm
Via Peter-Mitterhofer 23
39025 Naturno · Italia

Tel. +39 0473 667128
info@lunos.it
www.lunos.it

E468 09.23