
Istruzioni di montaggio per coperchi esterni tipo 1/Hxx, 1/Hxx 115, 1/Hxx-2

- Da inoltrare all'utilizzatire -

Unità di spedizione IT

Verificare che la fornitura sia completa e in condizioni impeccabili.


1/HWE	bianco	Cod. art.: 40 020
1/HAZ	antracite	Cod. art.: 40 021
(per serie e², ALD, AB 30/60, RA 15-60)		
1/HWE-2	bianco	Cod. art.: 40 107
1/HAZ-2	antracite	Cod. art.: 40 108
(per e^{go}, Ne^{xx}t)		
1/HWE 115	bianco	Cod. art.: 40 128
1/HAZ 115	antracite	Cod. art.: 40 129
(per Silvento ec/AC, e²mini)		

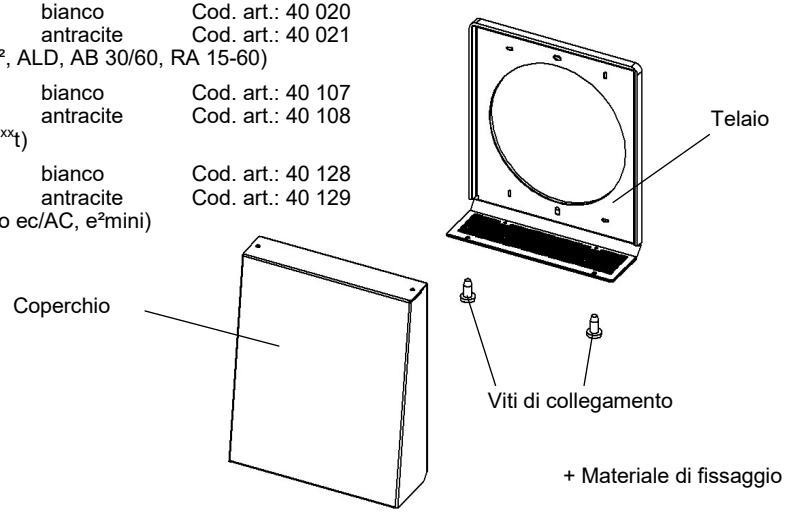

+ Materiale di fissaggio


Montaggio IT

①

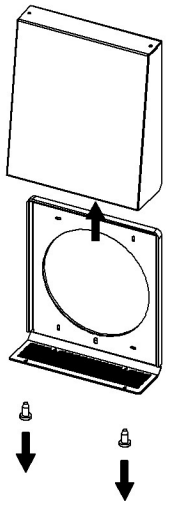


Rimuovere il coperchio dallla telaio allentando le viti di collegamento inferiori e facendo scorrere il coperchio verso l'alto.

②

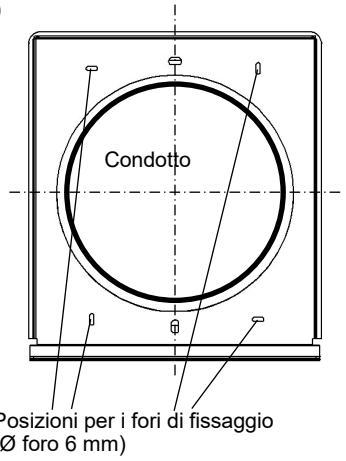


Segnare le posizioni dei fori di fissaggio per il telaio utilizzando il telaio stesso come dima. L'apertura del telaio deve trovarsi esattamente sopra l'apertura del condotto.

③

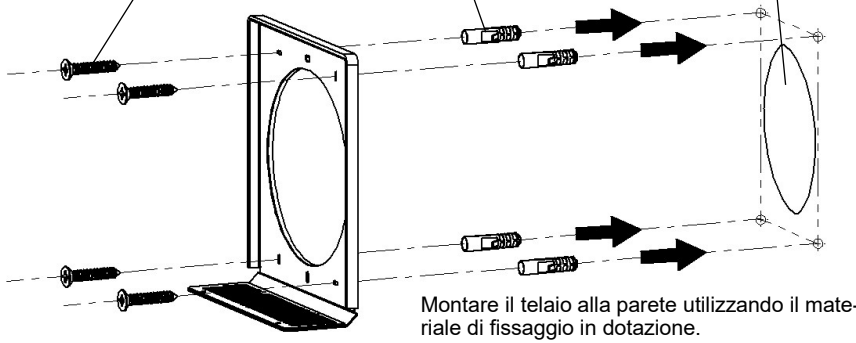


Montare il telaio alla parete utilizzando il materiale di fissaggio in dotazione.

④

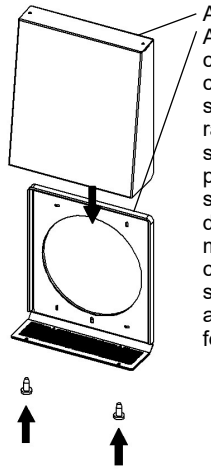

Far scorrere la copertura dall'alto sul telaio e fissarla con le viti di collegamento.

Avvertenza importante per i coperchi 1/HWE-2 e 1/HAZ-2:
I due flussi d'aria che attraversano il coperchio non devono mescolarsi; è quindi indispensabile un'installazione precisa e corretta. Posizionare la guarnizione del montante centrale del coperchio esattamente sopra il montante centrale dell'adattatore EPP presente nel condotto. È ammesso esclusivamente un orientamento verticale dei montanti centrali.

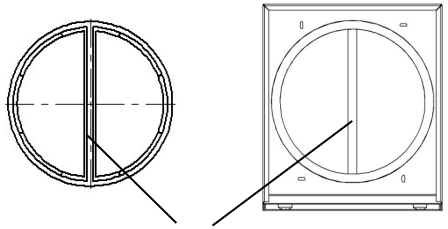

Posizionare in modo esattamente combaciante. È ammessa solo una posizione verticale dei montanti centrali.

Condensa IT

Sul coperchio può formarsi e fuoriuscire condensa durante il periodo di riscaldamento. In inverno assicurarsi che non si formino strati di ghiaccio sul marciapiede o stalattiti di ghiaccio che possano rappresentare un pericolo per i passanti.

Pulizia IT

Pulire il coperchio all'occorrenza con un panno morbido, asciutto o leggermente umido.

LUNOS Italia
Recuterm
Via Peter-Mitterhofer 23
39025 Naturno · Italia

Tel. +39 0473 667128
info@lunos.it
www.lunos.it


Installation Manual for the Weather Protection Hoods Types 1/Hxx, 1/Hxx 115, 1/Hxx-2

- Please forward to the user -

Shipping unit EN

Check delivery for completeness and undamaged condition!


1/HWE	white	Order No.: 40 020
1/HAZ	anthracite	Order No.: 40 021
(for series e², ALD, AB 30/60, RA 15-60)		
1/HWE-2	white	Order No.: 40 107
1/HAZ-2	anthracite	Order No.: 40 108
(für e^{go}, Ne^{xx}t)		
1/HWE 115	weiß	Order No.: 40 128
1/HAZ 115	anthracite	Order No.: 40 129
(for Silvento ec/AC, e²mini)		

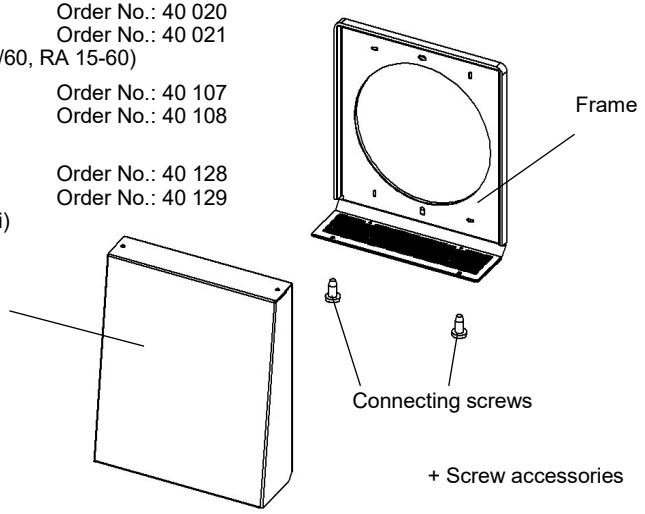

+ Screw accessories


Assembly EN

①

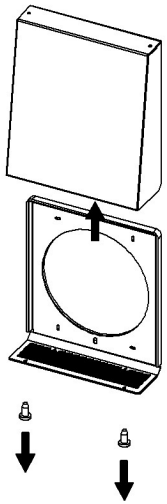


Remove the cover from the frame by loosening the connecting screws at the bottom and sliding the cover upwards.

②

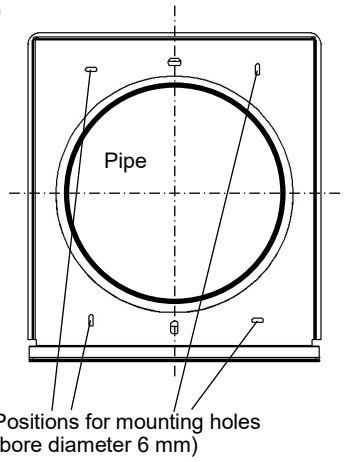


Mark the mounting holes for the frame. Use the frame as a template. The opening in the frame must be exactly above the pipe opening.

③

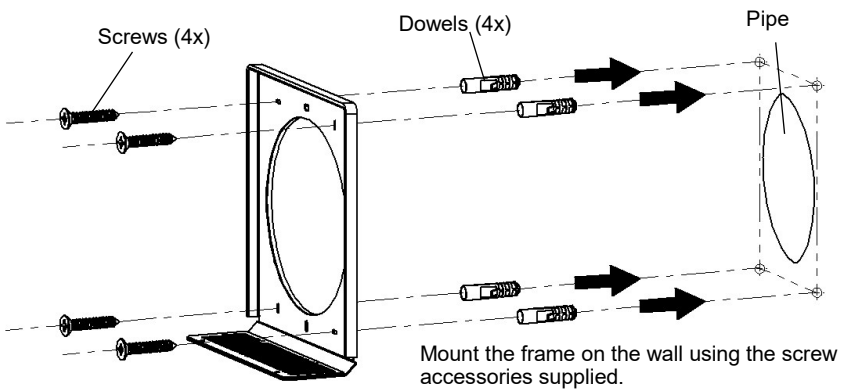

Mount the frame on the wall using the screw accessories supplied.

④

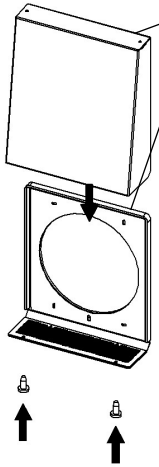


Note: Make sure that the cover noticeably snaps into the upper edge of the frame without leaving any gaps!

Slide the cover from the top onto the frame and secure it with the connecting screws.

Important information about the weather protection hoods 1/HWE-2 and 1/HAZ-2:
The two air currents flowing through the weather protection hood must not mix, therefore clean and correct assembly is absolutely essential! Therefore, install the gasket of the middle bar of the weather protection hood exactly above the middle bar of the EPP adapter in the pipe. Only a vertical position of the middle bars is permitted!

EPP-Adapter

Reverse of the weather protection hood 1/HWE -2 and 1/HAZ-2

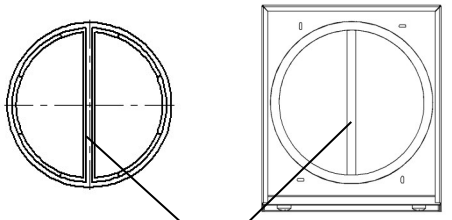

Put on exactly and congruently! Only a vertical position of the middle bars is permitted!

Condensate EN

In the weather protection, condensate can occur during the heating period and flow out of the opening. In winter, please make sure that there is no ice formation on the sidewalk or that no icicles form which can become a hazard for passers-by!

Cleaning EN

If necessary, wipe the weather protection hood with a dry or damp soft cloth.

LUNOS Italia
Recuterm
Via Peter-Mitterhofer 23
39025 Naturno · Italia

Tel. +39 0473 667128
info@lunos.it
www.lunos.it

E175 01.22