
Istruzioni di montaggio isolamento accustico
Tipo 9/SW Cod. Art. 039 850

- Da inoltrare all'utilizzatore -


Unità di spedizione

Verificare che la fornitura sia completa e in perfette condizioni.

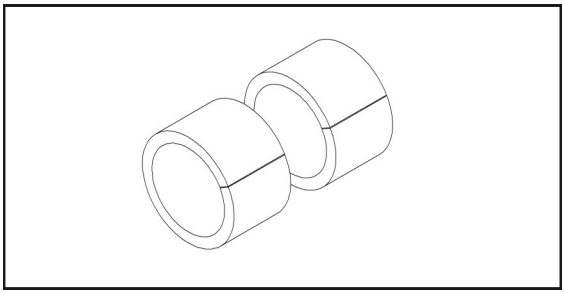

Montaggio

Le set di isolamento acustico vengono forniti in forma di tappetini, devono essere inseriti ad anello nel condotto e posizionati come illustrato.
Per ottenere la massima efficacia, il condotto tra dispositivo e pannello interno deve essere riempito completamente.
Se necessario, accorciare uno o più anelli.

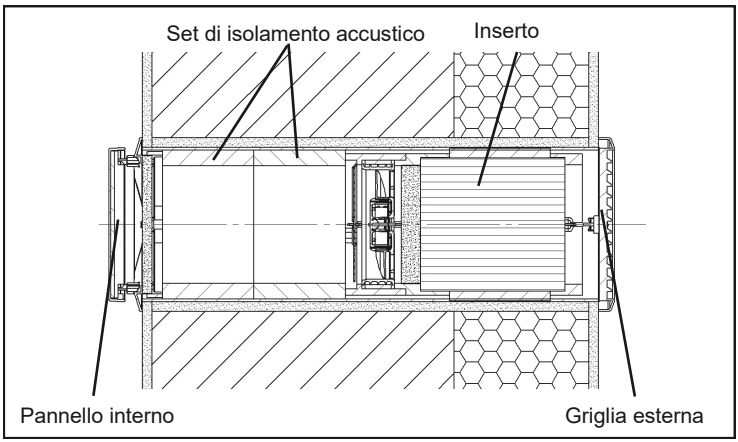

Note

LUNOS Italia
Recuterm
Via Peter-Mitterhofer 23
39025 · Naturno · Italia


Telefono: +39 0473 667128
info@lunos.it
www.lunos.it

Installation Manual Noise Reduction Set
Type 9/SW Order No. 039 850

- Please pass on to user -


Dispatch unit

Check the delivery for completeness and trouble-free status!

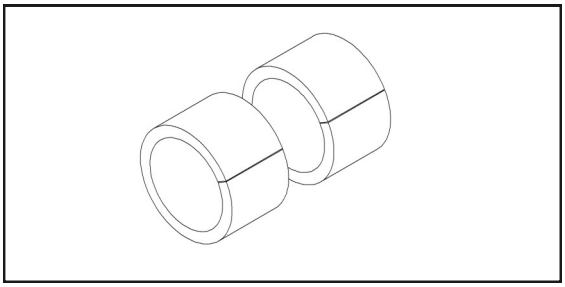

Installation

The sound insulation inserts are supplied as mats, has to be inserted in a ring shape in the pipe and positioned as shown. For a maximum effect, the tube should be completely filled between the device and the inner screen. If necessary, shorten the ring(s).

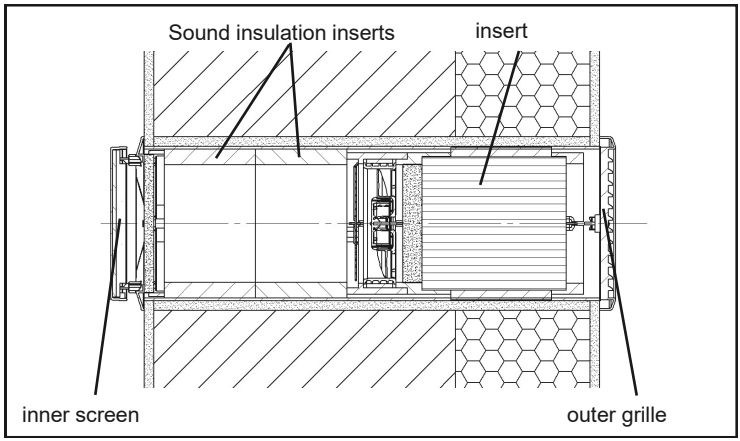

Notes

LUNOS Italia
Recuterm
Via Peter-Mitterhofer 23
39025 · Naturno · Italia

Telefono: +39 0473 667128
info@lunos.it
www.lunos.it

E353 09.19